

Introduction

The information in this document is intended as a general guide to help you set up the babyTEL service on your SIP compatible telephone system. It contains only babyTEL-specific parameters that need to be configured on your Dialogic Brooktrout SR140 software. For full and proper functioning of the babyTEL service and all other features, your equipment should be set up according to the detailed instructions provided by the manufacturer in their configuration guide. Make sure to use the latest Dialogic Brooktrout SR140 SDK.

Step 1 - Gather all the necessary information

Your User ID and Web password were provided to you in the Signup Confirmation email. Go to the babyTEL website (www.babytel.net) and login using your ID and password. (The login command can be found at the top right corner of the page.) Click on **babyTEL Service** to expand the menu and then click on **SIP Parameters**. A page similar to the example shown below will be displayed, with values relevant to your account.

babyTEL Plan

babyTEL Service

- ..Telephony Feature Settings
- 1 ..Configure my Messaging
- ..Change my Messaging Password
- ..911 locations
- 2 ..SIP Parameters
- ..Device Configuration Info
- ..Request support

Account

babyVillage

SIP Parameters

Display Name: Escher, Maurits

User ID: 15144480593

Authentication ID: 15144480593

SIP Password: [Show password](#)

Domain/Realm: sip.babytel.ca

SIP Proxy: sip.babytel.ca

SIP Proxy port: 5060

Outbound Proxy: nat2.babytel.ca


Outbound Proxy port: 5065

Please have this information at hand when you configure your system.

Step 2 - Configure the SR140 SIP Parameters Using babyTEL Information

Note: Values for the Items shown in **blue** should be taken from the SIP Parameters page for your account. When entering data, please do not include the brackets "<" and ">" shown above.

Note: When specifying the From Value, if the **Display Name** contains spaces or characters other than letters and numbers you must include it between quotes as in "Display Name".

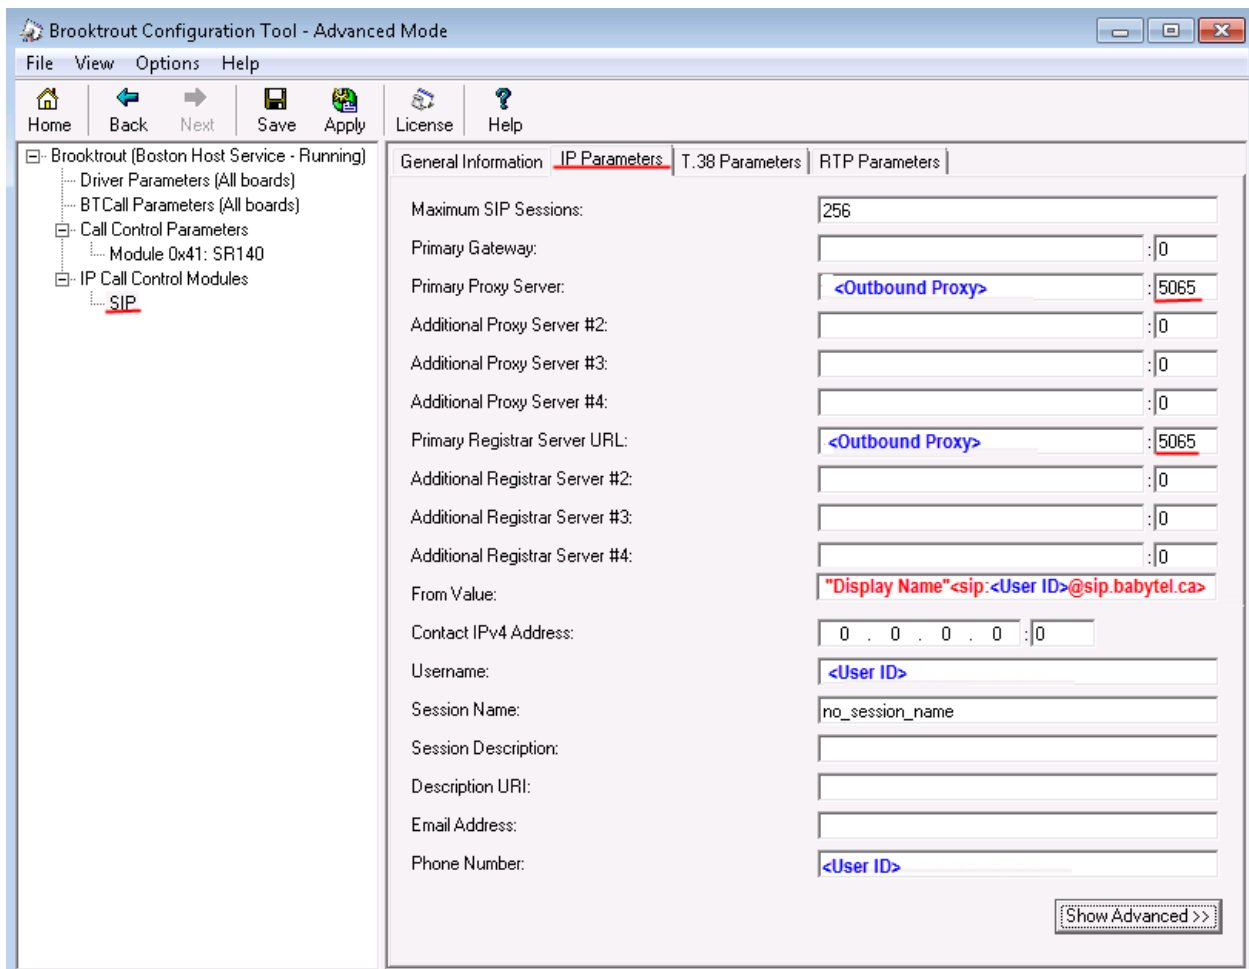

The screenshot shows the 'Brooktrout Configuration Tool - Advanced Mode' window. The left sidebar shows a tree view with 'SIP' selected under 'IP Call Control Modules'. The main area is divided into tabs: 'General Information', 'IP Parameters', 'T.38 Parameters', and 'RTP Parameters'. The 'IP Parameters' tab is active, showing various configuration fields:

- Maximum SIP Sessions: 256
- Primary Gateway: [] : 0
- Primary Proxy Server: <Outbound Proxy> : 5065
- Additional Proxy Server #2: [] : 0
- Additional Proxy Server #3: [] : 0
- Additional Proxy Server #4: [] : 0
- Primary Registrar Server URL: <Outbound Proxy> : 5065
- Additional Registrar Server #2: [] : 0
- Additional Registrar Server #3: [] : 0
- Additional Registrar Server #4: [] : 0
- From Value: "Display Name"<sip:<User ID>@sip.babytel.ca>
- Contact IPv4 Address: 0 . 0 . 0 . 0 : 0
- Username: <User ID>
- Session Name: no_session_name
- Session Description: []
- Description URI: []
- Email Address: []
- Phone Number: <User ID>



A 'Show Advanced >>' button is located at the bottom right of the configuration area.



Dialogic Brooktrout SR140 Configuration Guide

The screenshot shows the 'Brooktrout Configuration Tool - Advanced Mode' window. The left sidebar shows a tree view with 'SIP' selected under 'IP Call Control Modules'. The main area has tabs for 'General Information', 'IP Parameters', 'T.38 Parameters', and 'RTP Parameters'. The 'IP Parameters' tab is active, displaying a section titled 'Advanced Settings' with a warning: 'Do not change these parameters unless you have been instructed to do so'. Below this, there are several configuration fields:

Parameter	Value
Primary Registrar Server Address of Record:	<User ID>@sip.babytel.ca
Primary Registrar Server Username:	<Authentication ID>
Primary Registrar Server Password:	<SIP Password>
Primary Registrar Server Expiration:	600
Additional Registrar Server #2 ADR:	
Additional Registrar Server #2 Username:	
Additional Registrar Server #2 Password:	
Additional Registrar Server #2 Expiration:	3600
Additional Registrar Server #3 ADR:	
Additional Registrar Server #3 Username:	
Additional Registrar Server #3 Password:	
Additional Registrar Server #3 Expiration:	3600
Additional Registrar Server #4 ADR:	
Additional Registrar Server #4 Username:	
Additional Registrar Server #4 Password:	
Additional Registrar Server #4 Expiration:	3600
Registration Interval:	60
Registration Interval Delta:	60

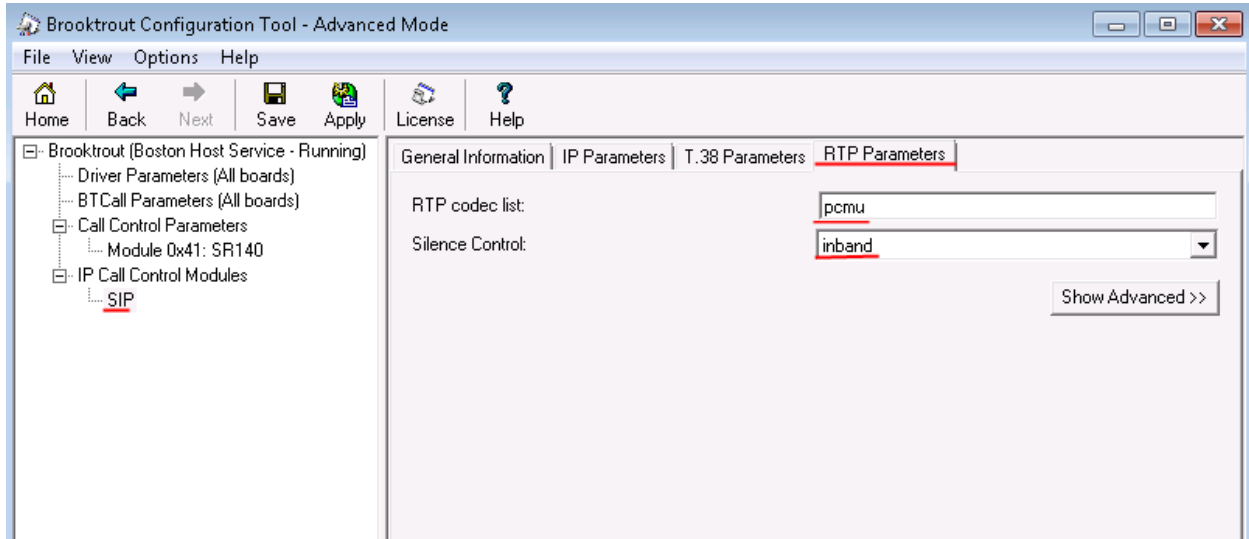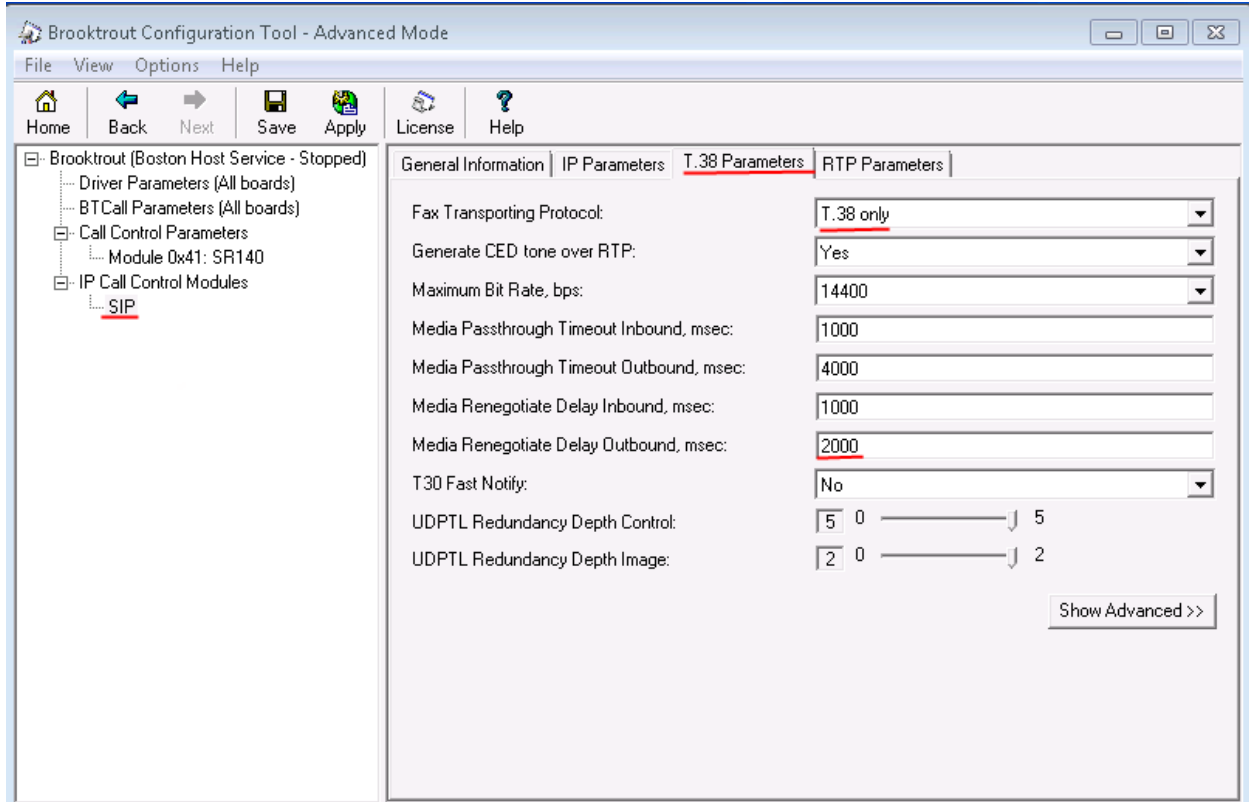

Contact

If you require assistance you can contact us 24 hours a day, 7 days a week, by email at service@babytel.net.



Dialogic Brooktrout SR140 Configuration Guide

You can also reach us by phone 7 days a week from 9 AM to midnight, Eastern Time at:

Canada	USA
Montréal: 514 201-6550 Toronto: 416 848-0990 Toll free: 1-877-258-VoIP (8647)	Toll free: 1-877-808-VoIP (8647)

Address: 1425 René-Lévesque, Suite 700, Montréal, Québec, Canada H3G 1T7

Website: www.babytel.net

Thank you for choosing babyTEL as your Internet Telephony Service Provider. We at babyTEL will continually strive to provide you a reliable service. As well, we will be regularly adding additional capabilities that you may find useful. Please keep up-to-date by visiting us at the babyTEL website. Pleasant surprises may await you.
